7. Adjustment

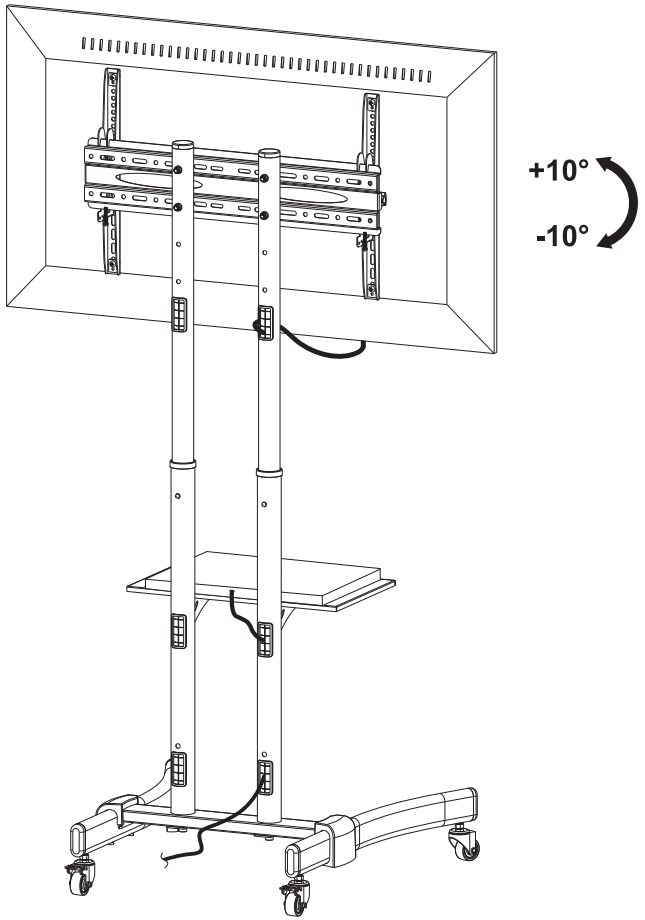

The TV can be tilted to the desired angle.
If the tilt angle can't be fixed,you can loosen or tighten the knobs to adjust the TV to the desired angle.

Maintenance
- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your distributor if you have any questions.

SBOX LIFE IN MOTION

INSTALLATION MANUAL

Flat Panel Mobile Cart

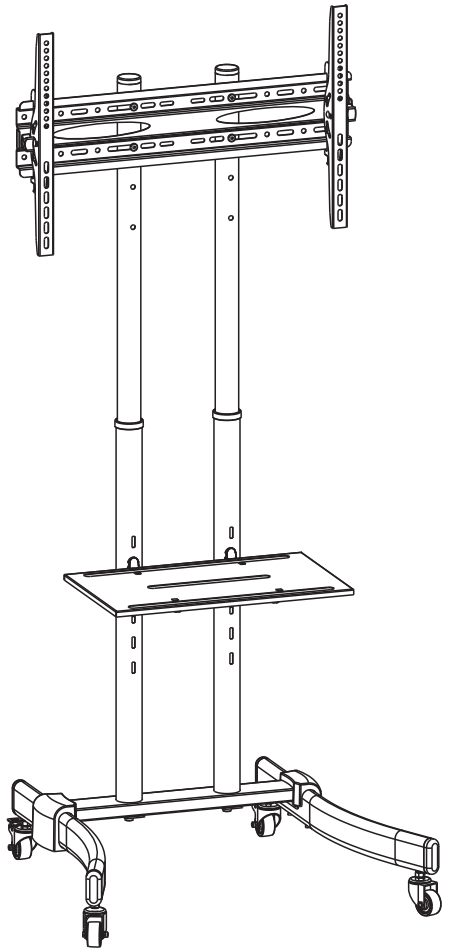

CAUTION: DO NOT EXCEED RATED LISTED WEIGHT. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

FS-400	200x200 300x300 400x200 400x400 600x400	70" MAX	TV 40kg (88lbs) RATED DVD 10kg (22lbs) RATED

NOTE: Read the entire instruction manual before you start installation and assembly.

⚠ WARNING

- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist

IMPORTANT: Ensure you have received all parts against the component checklist prior to installation. If any parts are missing or faulty, telephone the special franchiser for a replacement.


left base (x1)
A


right base (x1)
B

left
decorative cover (x1)
C

right
decorative cover (x1)
D

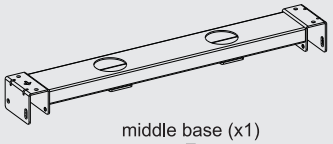
middle base (x1)
E

caster (x2)
F

caster with brake (x2)
G

column (x2)
H

protective casing (x6)
I


universal plate (x1)
J

DVD/AV components shelf (x1)
K

left shelf support (x1)
L


right shelf support (x1)
M

right adapter bracket (x1)
N

left adapter bracket (x1)
O

plastic stopper (x2)
P

Package M

M5x14 (x4)
M-A

M6x14 (x4)
M-B


M8x20 (x4)
M-C

M6x30 (x4)
M-D

M8x30 (x4)
M-E

washer (x4)
M-F

small spacer (x8)
M-G

big spacer (x4)
M-H

Package

M5x14 (x4)
P-A

M6x40 (x4)
P-B

M8x60 (x4)
P-C


M10x35 (x2)
P-D

D10
washer (x2)
P-E

D8
washer (x4)
P-F

D6
washer (x8)
P-G

M8
nut (x4)
P-H


wrench
P-I

5mm
Allen key (x1)
P-J


8mm
Allen key (x1)
P-K

1.Assembling the Base

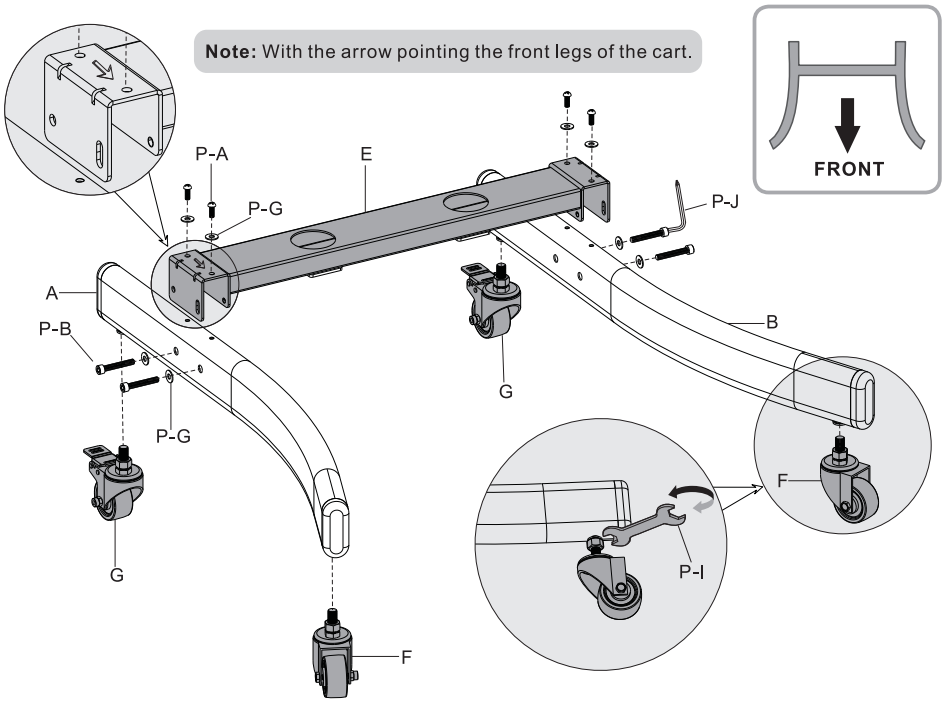

- Use the appropriate screws and washers to connect the left and right base to the middle base.
- Insert the casters into the holes and tighten the casters to secure.

Note: Make sure all casters are at the same height. Each caster can be adjusted independently for fine tuning. Slightly turn the nut to lower or raise the base.
Note: Lock the brakes on the casters to avoid any sudden movements during installation.

Tighten all screws but do not over tighten.

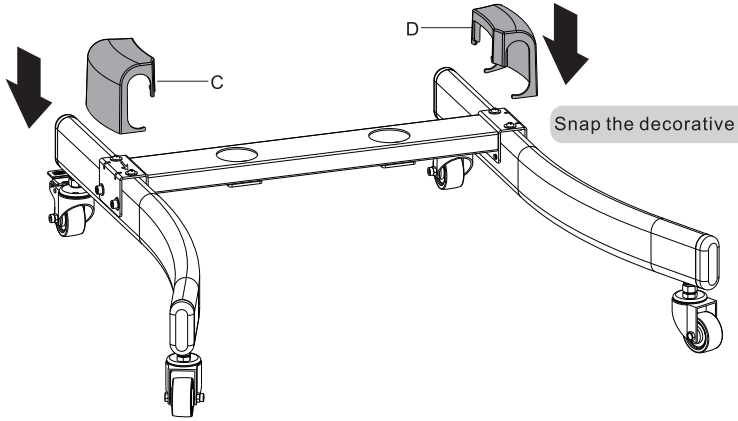

Snap the decorative covers onto the base.

2.Installing the columns

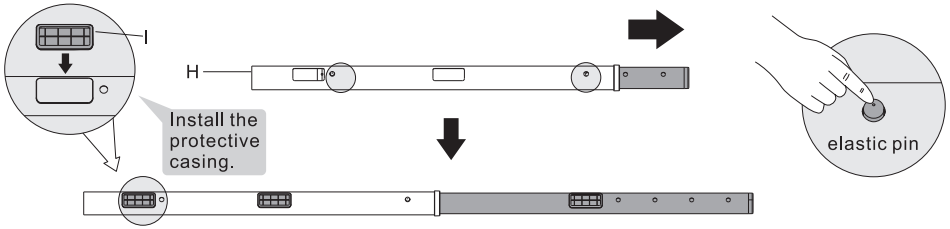

Press the elastic pin and pull out the inner column until the inner column is deadlocked.

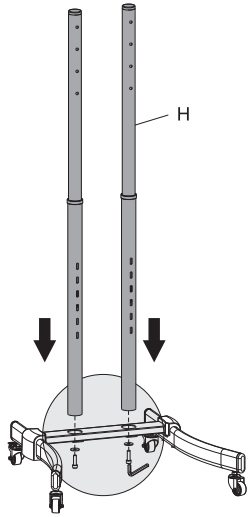

Attach the columns to the base using the appropriate screws and washers, Tighten all screws with the Allen key.

Tighten all screws but do not over tighten.

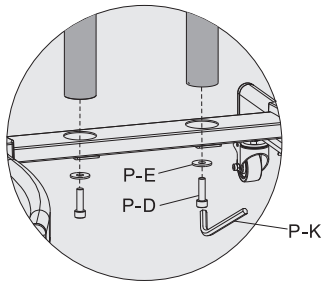

3.Installing the Universal Plate

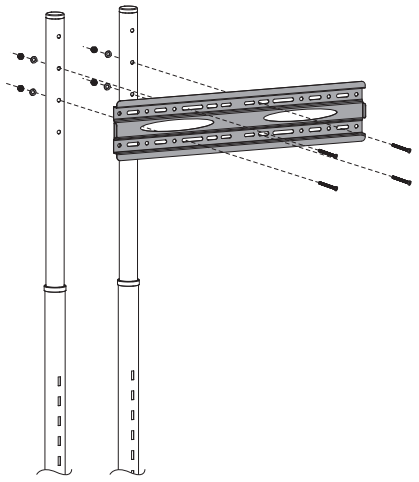

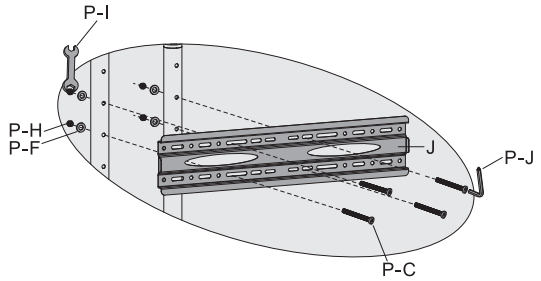

Attach the universal plate to the columns using the appropriate screws,washers and nuts.

Tighten all screws but do not over tighten.

4. Installing the DVD/AV Components Shelf

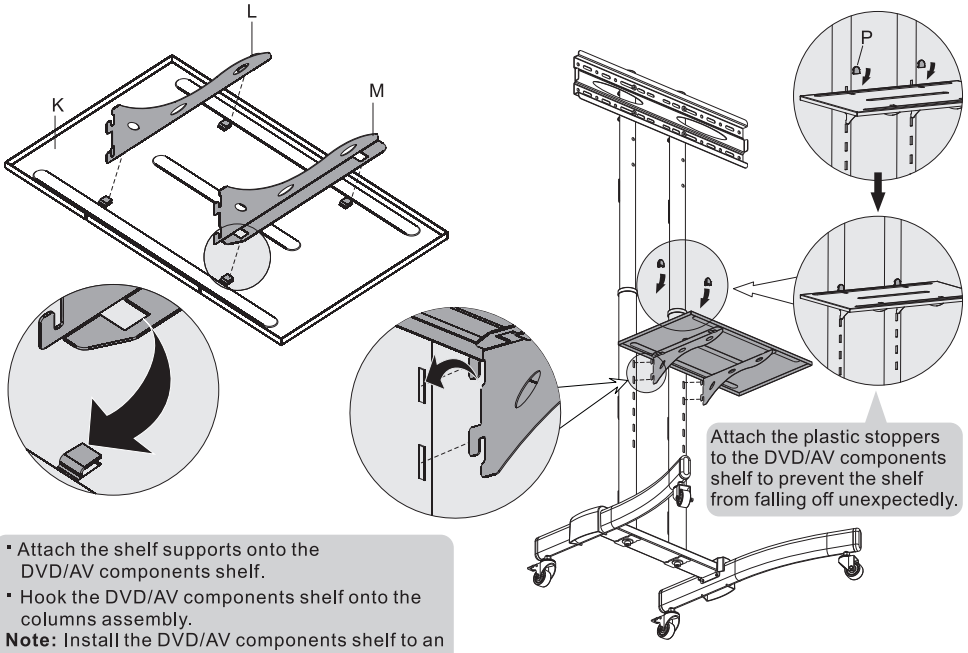

- Attach the shelf supports onto the DVD/AV components shelf.
- Hook the DVD/AV components shelf onto the columns assembly.

Note: Install the DVD/AV components shelf to an appropriate height as required.

5. Installing the Adapter Brackets

5-1.For Flat Back Screens

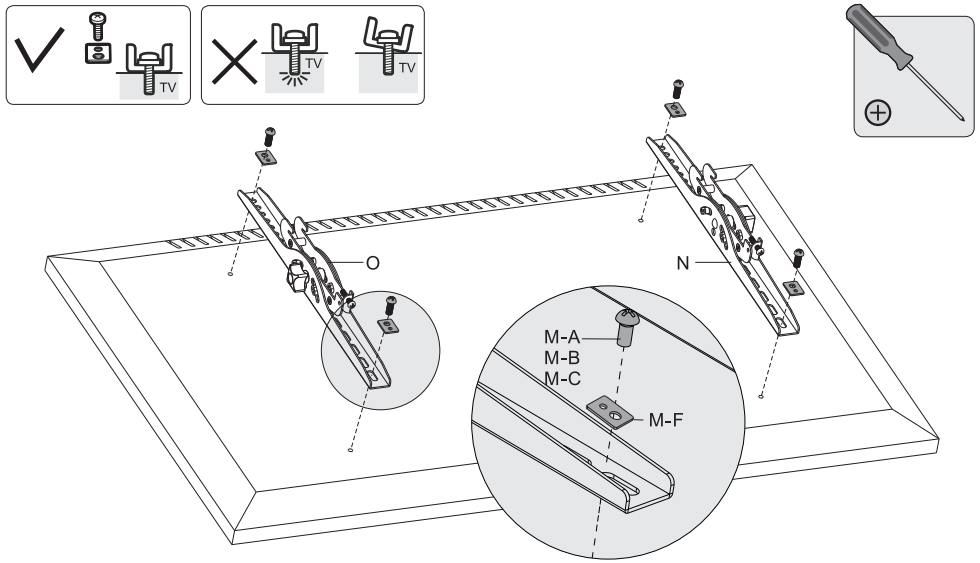

5-2.For Bump-out or Recessed Back Screens

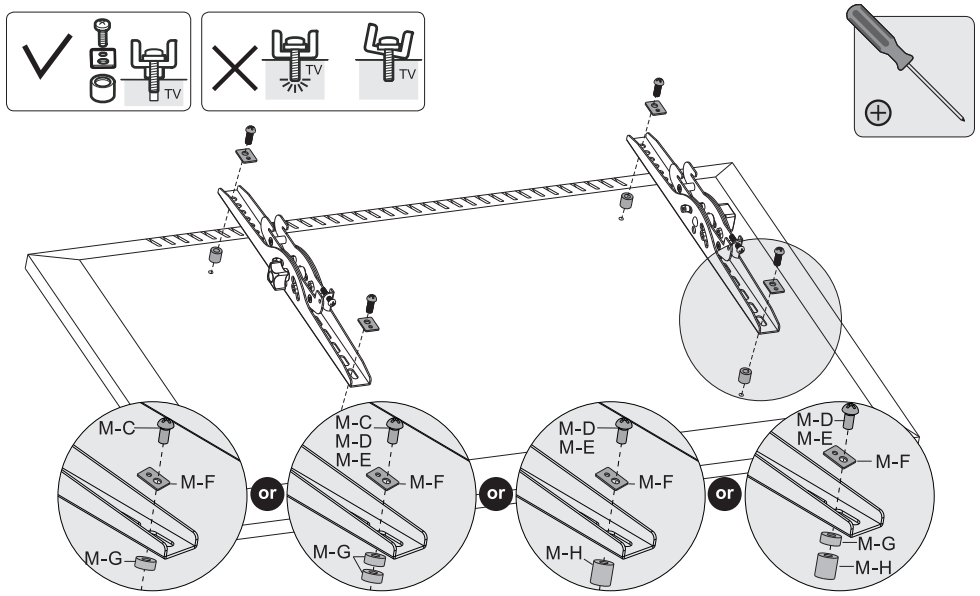

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screens.

- Position the adapter brackets as close as possible to the center of the TV.
- Screw the adapter brackets onto the TV.

Tighten all screws but do not over tighten.

6. Hanging the TV onto the Universal Plate

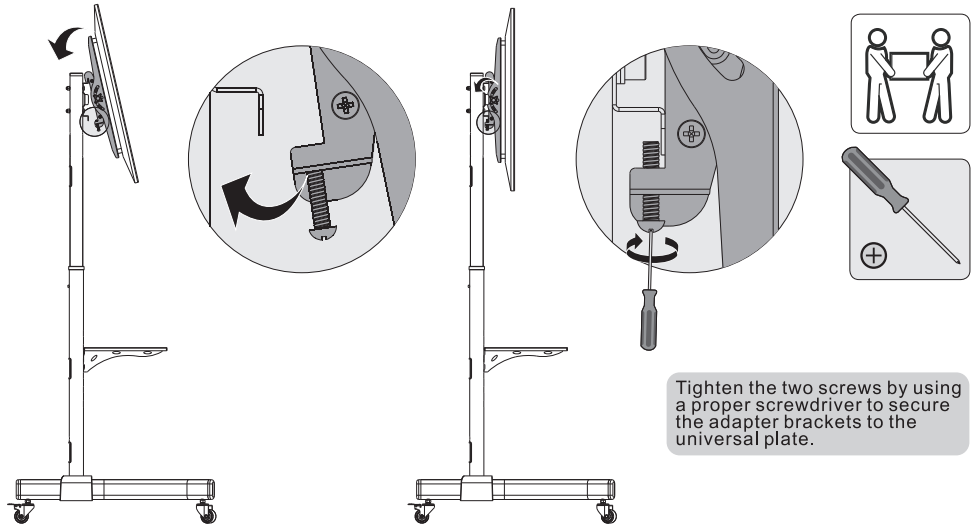

Tighten the two screws by using a proper screwdriver to secure the adapter brackets to the universal plate.